

GENERAL INFORMATION

TROUBLE SHOOTING

ENGINE PERFORMANCE

TUNE-UP TROUBLE SHOOTING

Problem & Possible Cause	Action
Carbon Fouled Plugs	
Clogged Air Filter	Replace Air Filter
Incorrect Idle Speed	Reset Idle Speed
Faulty Ignition Wiring	Replace Ignition Wiring
Sticky Valves/Worn Valve Seal	Check Valve Train
Fuel Injection Operation	Check Fuel Injection
Wet/Oil Fouled Plugs	
Worn Rings/Pistons	Overhaul/Replace Engine
Excessive Cylinder Wear	Overhaul/Replace Engine
Plug Gap Bridged	
Combustion Chamber Carbon Deposits	Clean Combustion Chamber
Blistered Electrode	
Engine Overheating	Check Cooling System
Loose Spark Plugs	Clean/Torque Plugs
Over-Advanced Timing	Reset Timing
Wrong Plug Heat Range	Install Correct Plug
Melted Electrodes	
Incorrect Timing	Reset Timing
Burned Valves	Replace Valves
Engine Overheating	Check Cooling System
Wrong Plug Heat Range	Install Correct Plug
Engine Won't Start	
Loose Connections	Check Connections
No Power	Check Fuses/Battery
Loose/Worn Timing Belt/Chain/Gears	Check Belt/Chain/Gears
Engine Runs Rough	
Leaky/Clogged Fuel Injectors	Repair Fuel Injectors
Leaky/Clogged Fuel Lines	Repair Fuel Lines
Clogged Fuel Filter	Replace Fuel Filter
Incorrect Timing	Reset Timing/Check Advance
Faulty Plugs/Wires	Replace Plugs/Wires
Uneven Compression	Overhaul/Replace Engine

Poor Acceleration	
Incorrect Ignition Timing	Reset Timing
Leaky Valves	Check Compression
Component Failure	
Spark Arcing	Replace Faulty Part
Defective Pick-Up Coil	Replace Pick-Up Coil
Defective Ignition Coil	Replace Ignition Coil
Defective Control Unit	Replace Control Unit
Ignition Diagnosis By Scope Pattern	
All Firing Lines Abnormally High	
Retarded Ignition Timing	Reset Ignition Timing
Lean Air/Fuel Mixture	Adjust Fuel Mixture
High Secondary Resistance	Repair Secondary Ignition
All Firing Lines Abnormally Low	
Rich Air/Fuel Mixture	Adjust Air/Fuel Mixture
Arcing Coil Wire	Replace Coil Wire
Cracked Coil	Replace Coil
Low Coil Output	Replace Coil
Low Compression	Check/Repair Engine
Several High Firing Lines	
Fuel Mixture Unbalanced	Check Fuel System
EGR Valve Stuck Open	Clean/Replace EGR Valve
High Plug Wire Resistance	Replace Plug Wire
Cracked/Broken Plugs	Replace Plugs
Intake Vacuum Leak	Repair Leak
Several Low Firing Lines	
Fuel Mixture Unbalanced	Adjust Fuel Mixture
Plug Wires Arcing	Replace Plug Wires
Cracked Coil Arcing	Replace Coil
Uneven Compression	Check/Repair Engine
Faulty Spark Plugs	Replace Plugs
Cylinders Not Firing	
Cracked Distributor Cap	Replace Cap
Shorted Plug Wires	Replace Plug Wires
Mechanical Engine Fault	Check/Repair Engine
Spark Plugs Fouled	Replace Plugs
Carbon Track in Distributor Cap	Replace Cap
Hard Starting	
Defective Ignition Coil(s)	Replace Coil(s)

Fouled Spark Plugs	Replace Plugs
Incorrect Timing	Reset Ignition Timing

FUEL INJECTION TROUBLE SHOOTING

Problem & Possible Cause	Action
Cold Start Valve Inoperative	Test Cold Start Valve
Poor Vacuum/Electrical Connection	Repair Connections
Contaminated Fuel	Test Fuel for Water/Alcohol
Bad Fuel Pump Relay/Circuit	Test Relay/Wiring
Battery Voltage Low	Charge/Test Battery
Low Fuel Pressure	Test Press. Regulator/Pump
No Distributor Reference Pulse	Repair Ignition System
Coolant Temp. Sensor Defective	Test Temp. Sensor/Circuit
No Power To Injectors	Check Injector Fuse/Relay
Hard Starting	
Defective Idle Air Control (IAC)	Test IAC and Circuit
EGR Valve Open	Test EGR Valve/Control Circuit
Restricted Fuel Lines	Inspect/Replace Fuel Lines
Poor MAP Sensor Signal	Test MAP Sensor/Circuit
Engine Stalls During Parking Maneuver	Check P.S. Press. Switch
Rough Idle	
Dirty Fuel Injectors	Clean/Replace Injectors
Poor MAP Sensor Signal	Test MAP Sensor/Circuit
Intermittent Fuel Injector Operation	Check Harness Connectors
Erratic Vehicle Speed Sensor Inputs	Harness Too Close to Plug Wires
Poor O ₂ Sensor Signal	Test O ₂ Sensor/Circuit
Faulty PCV System	Check PCV Valve and Hoses
Poor Acceleration	
Weak Fuel Pump	Replace Fuel Pump
Dirty Fuel Injectors	Clean/Replace Injectors
Excessive Intake Valve Deposits	Clean Intake System
Poor High Speed Operation	
Low Fuel Pump Volume	Faulty Fuel Pump/Filter
Poor MAP Sensor Signal	Test Speed Sensor/Circuit
Acceleration Ping/Knock	
Faulty EGR System	Check EGR Valve and Hoses
Poor Knock Sensor Signal	Test Knock Sensor/Circuit
Poor Baro Sensor Signal	Test Baro Sensor/Circuit
Improper Ignition Timing	Adjust Timing

Engine Overheating	Check Cooling System
Poor Quality Fuel	Use Different Fuel
Carbon Build-Up	Decarbon Engine